

# iBible

@hearing.the.Word.brings.forth.faith



Pictures used are for illustration and contrast purposes only. Actual product may differ in color

 
## iBible m3 User Guide

**"Lord, to whom shall we go? Thou hast the words of eternal life."  
"Thy word is a lamp unto my feet, and a light unto my path."**





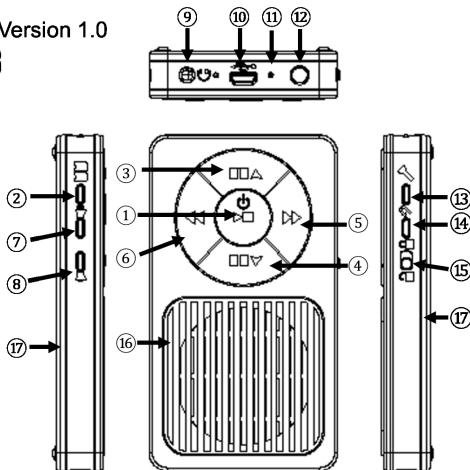

User Guide, Version 1.0



## iBible m3




- ① Power/Play; Pause
- ② Toggle OT/NT etc.
- ③ Next Book
- ④ Previous Book
- ⑤ Next Chapter
- ⑥ Previous Chapter
- ⑦ Volume +
- ⑧ Volume -
- ⑨ Earphone Jack
- ⑩ Micro – B socket
- ⑪ LED indicators
- ⑫ LED Torch
- ⑬ Torch Switch
- ⑭ Reset
- ⑮ Lock Switch
- ⑯ Speaker
- ⑰ Solar Panel (Optional)

Buttons	What It Does	Usage Tips
	Power / Play / Pause (PPP)	<p>Press to turn the device on. Press briefly to toggle between Play and Pause/OFF modes. The device will only play when the button is released.</p> <p>When switched off, the device will remember the current position in the narration and the current volume level.</p> <p>Lock Device (15) if necessary, to prevent accidental pressing. The current position and volume will be lost if the battery goes flat.</p>
	Toggle between OT/NT	Press briefly to skip from OT to Psalms to NT and to any extra audio content. Please note there are some models with NT only.
	Book + (next book)	<p>Press briefly to skip from current to next book (e.g. Genesis to Exodus).</p> <p>Note: The book of Psalms has been separated into 5 sub-books (about 30 chapters per sub-book) for fast and easy access, i.e. Psalms 1–29 (1<sup>st</sup> sub-book), Psalms 30–59 (2<sup>nd</sup> sub-book), Psalms 60–89 (3<sup>rd</sup> sub-book), Psalms 90–119 (4<sup>th</sup> sub-book), and Psalms 120–150 (5<sup>th</sup> sub-book).</p>

Buttons	What It Does	Usage Tips
④  ▼	Book – (previous book)	Press briefly to skip from current book to beginning of the previous book.
⑤ ▶▶	Chapter + / Scroll forward	Press briefly to skip to the next chapter. Press and hold to scroll forward.
⑥ ◀◀	Chapter - / Scroll back	Press briefly to skip to the previous chapter. Press and hold to scroll backward .
⑦ 🔊+	VOL +	Volume + (increase). Press briefly to increase volume.
⑧ 🔊-	VOL -	Volume – (decrease). Press briefly to decrease the volume. The device remembers the volume when it is switched off, so beware that if the volume level is turned low before switching off, you may not hear it playing when it is switched on again in a noisier environment.

Buttons	What It Does	Usage Tips
⑨ 	Earphone Jack (Earphone is not included in the package)	Any standard stereo 3.5mm jack 32Ω earphones can be used. Mobile earphones and iPhone earphones (with microphones) cannot be used. It is advisable to reduce the volume before using earphones and then increase the volume to a comfortable level once the earphones have been inserted.
⑩ 	Micro-B socket	This port is for charging the internal lithium rechargeable battery with the supplied USB cable. A computer cannot communicate with the <b>iBible m3</b> via this USB connection. Any mobile phone charger with micro B USB plug can be used to recharge the device.
⑪	LED	<ul style="list-style-type: none"> <li>- Blue — Device in play mode</li> <li>- Orange — Battery needs charge</li> <li>- Red — Battery is being charged</li> <li>- Green — Battery fully charged</li> <li>- Red+Orange — Device in play mode while charging (battery low)</li> <li>- Red+Blue — Device in play mode while charging (battery high)</li> <li>- Green+Blue — Device in play mode. Battery fully charged</li> <li>- No LEDs on—Battery is flat.</li> </ul>

Buttons	What It Does	Usage Tips
⑪	LED (continued)	<p>If the battery goes flat (no LEDs on), then the device will stop playing and will lose its current position in the narration. It is best for the health and life of the battery to recharge as soon as the orange LED comes on.</p> <p><u>Note:</u></p> <ol style="list-style-type: none"> <li>1. If the device cannot be played upon purchase, then please charge it for at least half hour before use (as battery may be depleted during storage).</li> <li>2. When battery is flat and being charged, device may auto play for a few seconds after 5 to 10 mins. Wait for 1 minute before pressing PLAY or RESET to play. This behaviour is normal due to the particular design of the device.</li> <li>3. If the device will not be use for a long period, then please give the battery a full charge before storage.</li> </ol>
⑫ ⑬	LED Torch	<p>Unlock ⑮ and press to switch on the LED torch. When torch is not used, recommend lock switch ⑮.</p>
⑭	Reset	This is to reset the device

Buttons	What It Does	Usage Tips
⑮ 	Lock Switch	<p>LOCK switch. This is to prevent accidental activation of buttons when device is placed in pockets or handbags.</p> <p>When the LOCK is on, the device in Play mode will not respond to any button presses.</p> <p>When device in Off mode and LOCK is activated, the buttons will not be activated when pressed, including the PPP button.</p>
⑮	Speaker	Audio output via speaker
⑮	Solar Panel	This is an optional item. If your device comes with the solar panel, you can charge the device under direct sunlight. LED indicators are similar to charging via power supply.
⑦+⑧	Repeat	Press both buttons together to 'repeat' the Chapter being played. A 'beep' will sound to indicate 'repeat' function being activated. To deactivate 'repeat', just skip to another chapter, or switch the device off and then on again.

## **PRODUCT WARRANTY**

This warranty is valid in respect only to **iBible / my-iBible** products purchased locally and through authorized my-iBible distributors or dealers.

This warranty guarantees the equipment to be free from defects in workmanship and materials under normal use for a period of 1 year from the date of purchase by the original end-user purchaser and is not transferable. This limited warranty DOES NOT COVER finishes and external parts such as buttons and other attachments, consumable parts, and cleaning. In no event shall "**the story box**" be liable for breach of any obligations to the purchaser or user of the equipment for any special, incidental or consequential damages, including but not limited to the loss of profit and revenues, anticipated or otherwise, loss of the equipment, damage to the equipment, any loss relating to facilities or service of capital, cost of substitution of equipment, loss due to downtime cost or claims of the purchaser or users of the equipment for such damages caused by any defective equipment whether such defective equipment are warranted against or not. Internal/removable batteries are warranted for a limited period of 6 months from date of purchase.



## **GENERAL TERMS AND CONDITIONS**

1. Your unit and components contained therein are fully warranted against defective material and manufacturing faults under our product warranty guide from date of purchase.
2. To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery to our service personnel at the time of service.
3. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such a decision. Any unit or defective part which has been replaced shall become our property.
4. The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or subtracting from these terms and conditions.
5. "the story box" reserves the right to charge a service fee for out of warranty repair/service of any nature and shall not be deemed liable if the conditions are not met.
6. This warranty shall exclude request pertaining to all refund, replacement, or exchange.
7. Products that are found to be corroded shall immediately render the warranty as void.

**The following are not covered under this warranty:**

1. Damage resulting from accidents, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Defects or damage due to spillage of food/liquids or wrong usage of electrical supply and voltage.
3. Damage, losses, defects, or malfunction as a result of accident, misuse, fire, flood, earthquake, or other external natural disasters or causes.
4. Normal wear and tear, corrosion, rusting, or stains.
5. Defects and damage arising from improper testing, operation, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
6. Scratches and damages to the outer surface areas and externally exposed parts that are due to normal customer use.
7. General maintenance, routine servicing, and onsite tuning or adjustments.
8. Any equipment/product that has its warranty label sticker removed or made illegible or that has been tampered with.
9. If the warranty card is altered, defaced, or erased in any manner whatsoever.

# iBible

@hearing.the.Word.brings.forth.faith



## iBible m3

### 使用說明/保證書1.0



 
"主啊，你有永生之道，我們還歸從誰呢?"




"你的話是我腳前的燈，是我路上的光。"





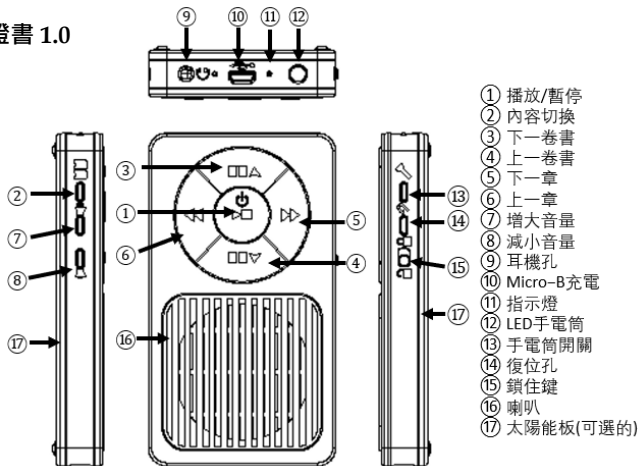




使用說明/保證書 1.0

## iBible m3



按鍵	功能	使用方法
① 	播放/暫停	<p>短按即可“播放/暫停”本機。</p> <p>當開機的時候，機器會以上次的音量，上次的位置繼續播放。</p> <p>注意：從機器中取出電池，將遺失所有記憶的資料（音量大小與播放位置）。</p>
② 	內容切換	<p>在舊約與新約之間切換，或者其他內容間相互切換。每切換一次，都會從所切換內容的首項資料位置開始播放。</p>
③ 	下一卷書	<p>從當前的書切換到下一本書。(如：<u>創世記</u>到<u>出埃及記</u>)</p> <p>每一本書的開始有兩個獨特音節的標示。</p> <p>注意：為了快速、便捷地使用，詩篇分為五個部分(每個部分大約有30章)。第一部分為<u>詩篇1-29</u>，第二部分為<u>詩篇30-59</u>，第三部分為<u>詩篇60-89</u>，第四部分為<u>詩篇90-119</u>，第五部分為<u>詩篇120-150</u>。</p> <p>注意：如果你在播<u>瑪拉基書</u>(舊約的最後一本書)時按<u>下一本書</u>，會切換到<u>馬太福音</u>。同樣的，如果你在<u>啟示錄</u>(新約的最後一本書)時按<u>下一本書</u>，會切換到<u>創世記</u>。</p>

按鍵	功能	使用方法
④ 	上一卷書	從目前的書卷切換到上一卷書。
⑤ 	下一章	短按-下一章。長按-可在本章中快進。
⑥ 	上一章	短按 -上一章。長按 -可在本章中快退。
⑦ 	增大音量	增大音量。長按 X+ 按鍵可以連續增大音量
⑧ 	減小音量	減小音量。長按 X- 按鍵可以連續減小音量
⑨ 	耳機孔	「耳機」為自購用品，請使用標準的3.5mm耳機。
⑩ 	USB充電	使用標準電腦或是充電器USB 5V 充電。

按鍵	功能	使用方法
⑪	指示燈	<p>LED燈的操作和顯示如下：</p> <ol style="list-style-type: none"> <li>1.電池低電量時，播放時，黃色燈亮，</li> <li>2.電池電量高時，播放時，藍色燈亮。</li> <li>3.充電時，紅色燈亮。不閃爍。</li> <li>4.充電完成時，綠色燈亮，同進，紅色燈滅。</li> <li>5.電池電時低時，充電並同時播放時，紅色燈和黃色燈亮。</li> <li>6.電池電量高時，充電並同時播放時，紅色燈和藍色燈亮。</li> <li>7.當充電完成，但沒有拔充電器時，並同時播放，這時綠色燈和藍色燈亮。</li> </ol> <p><b><u>請注意：</u></b></p> <ol style="list-style-type: none"> <li>1.請客戶第一次PLAY時，如果無法播放，可能是電池電量不足，請充電30分鐘，再播放。</li> <li>2.當電池電量耗盡後，充電5-10分鐘左右，機器會發出提示聲音，聽到提示聲音時，請等待60秒鐘以後，再按PLAY鍵或RESET鍵進行播放。</li> <li>3.當客戶長時間不使用設備時，請對設備充滿電後保存。</li> </ol>

按鍵	功能	使用方法
⑫ ⑬	LED 灯	拔動開關打開時，按手電筒開，手電筒LED亮，按手電筒關時，手電筒關閉。 拔動開關上鎖時，按手電筒開或關，手電筒LED都是關閉。
⑭	復位孔	重啟設備。
⑮	按鍵鎖	防止機器放置在口袋或手袋時，按鍵被意外按下。 在開機和鎖按鍵的狀態下，所有按鍵都失效。
⑯	內置揚聲器	忠告：不要將揚聲器放得太靠近耳朵。
⑰	太陽能板	通過太陽能板充電（可選的一不包含）
⑦+⑧	重复章	同時按下後，會重複播放當前播放的章。當重複功能激活時，會發出“嗶”聲。切換到其他的章或重新開機就會退出重複功能。



## 產品保修說明書

此份保修說明書只適用於在**iBible / my-iBible**授權的當地經銷商處購買的產品。

此份保修說明書確定購買人所購買的合格產品（沒有製造或使用的缺陷）自購買日起享受一年的保修服務，此產品保修說明書不能轉讓給他人。此保修書的服務專案不包含外觀和按鍵等外部件，以及其它配件和消耗品，也不包含清洗服務。**the story box** 沒有義務承擔由購買者或產品使用者故意損壞產品造成的損失，這種損失包括預期收益虧損、產品丟失、產品損壞，與資金相關的服務或產品的損失、換新費用、宕機成本或購買者聲稱因本品的損壞導致其他物品損壞等。

## 保修條款及注意事項

1. 購買的零件或產品自購買日起就享受保修服務，此保修服務是針對產品的材料和製造缺陷。
2. 為了保障購買者的保修權利，請購買者在發現購買的產品有缺陷時，在工作時間聯繫我們的售後人員。
3. 因產品缺陷（製造或材料問題）所引起的投訴，**the story box** 擁有最終決定權。購買者

4. 此保修說明書中所包含的保修條款及注意事項是專用的，如果其它檔涉及相關內容，那則視為摘錄或引用。
5. **the story box** 權對保修條款範圍以外的維修服務收取費用。
6. 此保修書不涉及退款、換貨等要求。
7. 此保修書對生鏽或腐蝕的產品無效。

### 以下情況不在此保修書範圍之內：

1. 沒有按照產品操作說明書而對產品進行不當操作、改造等引起的損壞。
2. 因食品或液體溢出，及使用不正確的電源所引起的損壞和故障。
3. 由意外、濫用、火災、洪水、地震或其它自然災害所造成的損壞和故障。
4. 正常的磨損、腐蝕、生鏽或污漬。
5. 因不當的測試、操作、演示、維修、安裝等所造成的損壞和故障。
6. 因正常使用對產品表面或裸露在外部份造成的刮傷和磨損。
7. 一般維修、日常保養或現場調試。
8. 產品的保修貼紙被去除、篡改或無法辨認的產品。
9. 保修卡被塗改、汙損或撕毀的產品。

# **iBible m3**

@hearing.the.Word.brings.forth.faith

the story box  
my mailbox 888441  
singapore 919191  
my.ibible@gmail.com  
webmaster@ibible.xyz  
<http://iBible.Asia>

